

MK-...-DS/HC (All ITE pumps)

Instruction manual



This vacuum pump is equipped with an automatic operated solenoid valve that will close as soon as the pump is switched off.

If the vacuum pump is used to evacuate air out of an R600a, R290 or a R32 system please make sure that the evacuated mixture of air and refrigerant is evacuated away from the pump.

In order to assure this, use the oil filter and the 5-meter-long hose supplied together with the station.

Remove the blue exhaust shroud on the pump and replace it with the oil mist filter (see mounting instructions). Connect the 5m long exhaust hose to the exit of the filter and make sure that the air/gas mixture is vented as far as possible away from the pump (minimum 3 meter).